

BOOMER/WC CLUBROOM AUDIO SYSTEM

Application **Background SCW musit**

<input type="checkbox"/>	Powerstrip	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
<input type="checkbox"/>	Upper Am	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
	Master volume	<input type="checkbox"/>	Min	<input type="checkbox"/>	Middle	<input type="checkbox"/>	Max
<input type="checkbox"/>	Lower Amp	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
	Master volume	<input type="checkbox"/>	Min	<input type="checkbox"/>	Middle	<input type="checkbox"/>	Max
<input type="checkbox"/>	Wall swtich by system	<input type="checkbox"/>	SAT	<input type="checkbox"/>	AV CAB		
	Volume setting	<input type="checkbox"/>	Min	<input type="checkbox"/>	Middle	<input type="checkbox"/>	Max
<input type="checkbox"/>	HDMI remote	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
	#1 Apple TV						
	#2 TV2						
	#3 HIMI						
	#4						
	#5 DVD						
<input type="checkbox"/>	Northwest corner switch	<input type="checkbox"/>	E COMB	<input type="checkbox"/>	Normal	<input type="checkbox"/>	W Comb
<input type="checkbox"/>	Kitchen wall switch	<input type="checkbox"/>	Music	<input type="checkbox"/>	Microphone		
	Volume side and ft rooms ad side ar rooms						
<input type="checkbox"/>	Projector remote	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
<input type="checkbox"/>	Women's wirelss	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
<input type="checkbox"/>	Boomer's box 1 wirelss	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		H10 mic
<input type="checkbox"/>	Boomer's box 2 wirelss	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
<input type="checkbox"/>	Apple Remote	<input type="checkbox"/>	On	<input type="checkbox"/>	Off		
<input type="checkbox"/>	Shut down						