

BOOMER/WC CLUBROOM AUDIO SYSTEM

Application **Apple TV**


<input type="checkbox"/>	Powerstrip	<input checked="" type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/>	Upper Am	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off	
	Master volume	<input type="checkbox"/> Min	<input type="checkbox"/> Middle	<input type="checkbox"/> Max
<input type="checkbox"/>	Lower Amp	<input checked="" type="checkbox"/> On	<input type="checkbox"/> Off	
	Master volume	<input type="checkbox"/> Min	<input type="checkbox"/> Middle	<input type="checkbox"/> Max
<input type="checkbox"/>	Wall swtich by system	<input type="checkbox"/> SAT	<input type="checkbox"/> AV CAB	
	Volume setting	<input type="checkbox"/> Min	<input type="checkbox"/> Middle	<input type="checkbox"/> Max
<input type="checkbox"/>	HDMI remote	<input checked="" type="checkbox"/> On	<input type="checkbox"/> Off	
	#1 Apple TV			
	#2 TV2			
	#3 HIMI			
	#4			
	#5 DVD			
<input type="checkbox"/>	Northwest corner switch	<input type="checkbox"/> E COMB	<input type="checkbox"/> Normal	<input type="checkbox"/> W Comb
<input type="checkbox"/>	Kitchen wall switch	<input type="checkbox"/> Music	<input type="checkbox"/> Microphone	
	Volume side and ft rooms ad side ar rooms			
<input type="checkbox"/>	Projector remote	<input checked="" type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/>	Women's wirelss	<input type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/>	Boomer's box 1 wirelss	<input type="checkbox"/> On	<input type="checkbox"/> Off	H10 mic
<input type="checkbox"/>	Boomer's box 2 wirelss	<input type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/>	Apple Remote	<input checked="" type="checkbox"/> On	<input type="checkbox"/> Off	
<input type="checkbox"/>	Shut down			

APPLE TV APPLICATION


- Turn on the Power Strip
- Turn on the lower amplifier.



- Turn on the HDM remote and press button #1 (Make sure the remote is aimed at the audio equipment).
You will not see anything on the remote but look at the box above the power strip and see if the light is on and the #1 light is on.

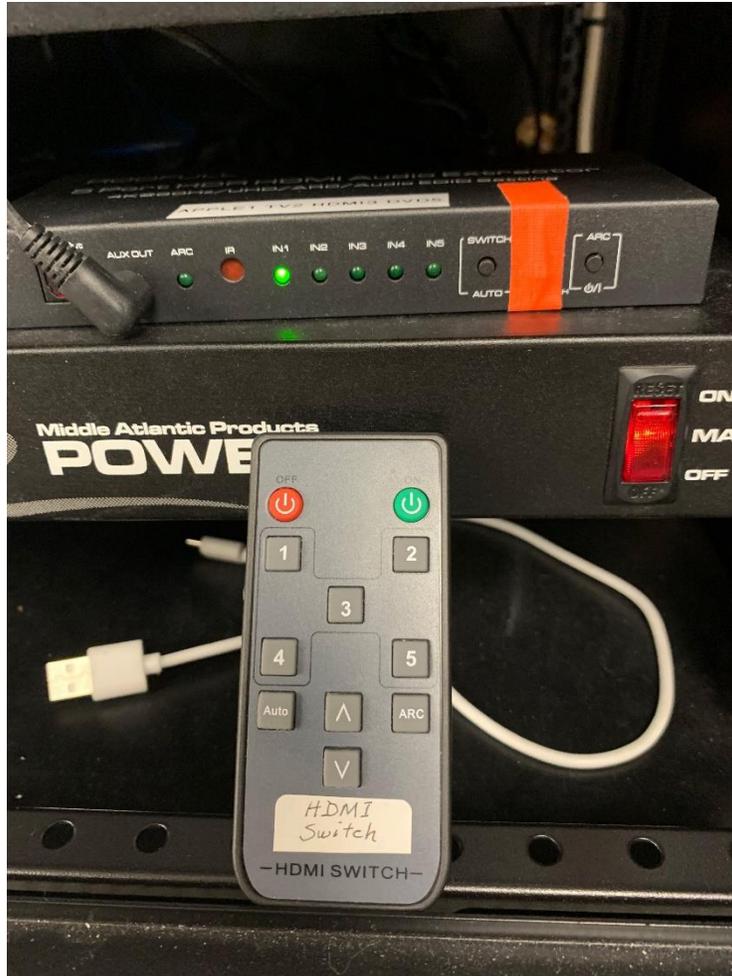

- ❑ Turn on the projector with the remote (note it may take a few seconds to turn on. If on you will see the first two blue lights showing, the first light is always on.)
MAKE SURE TO AIM THE REMOTE AT THE PROJECTOR AND NEAR THE PROJECTOR ON THE CEILING.

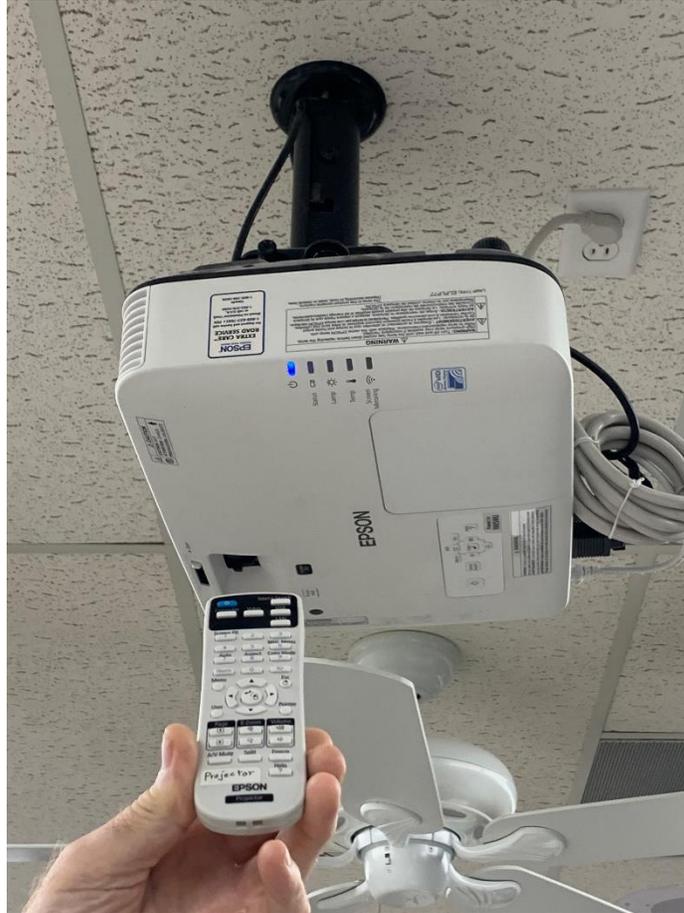

- Plug in the HDMI cable to the HDMI wall outlet below the audio cabinet. The other end can be plugged into a computer with a HDMI port, or with an HDMI to Apple small white adapter (in small box in audio cabinet) into the Apple phone or tablet. Pull the screen down.
- On the Apple remote, turn it on, make sure you are pointing to and near the Apple remote to the audio system



If you get a screen (shown below) use the Apple remote, pointed to the audio cabinet) and Apple TV . The MENU button will turn it off.



AirPlay

Wirelessly send what's on your iOS device or computer to this display using AirPlay.

To learn more, go to apple.com/airplay.

- 1 Network Configuration
Connect To Wi-Fi Network
- 2 Choose This Apple TV
Apple TV